


RADIANT COMFORT™

Hydronic In-floor Insulation Panels Carpet Flooring Installation Detail

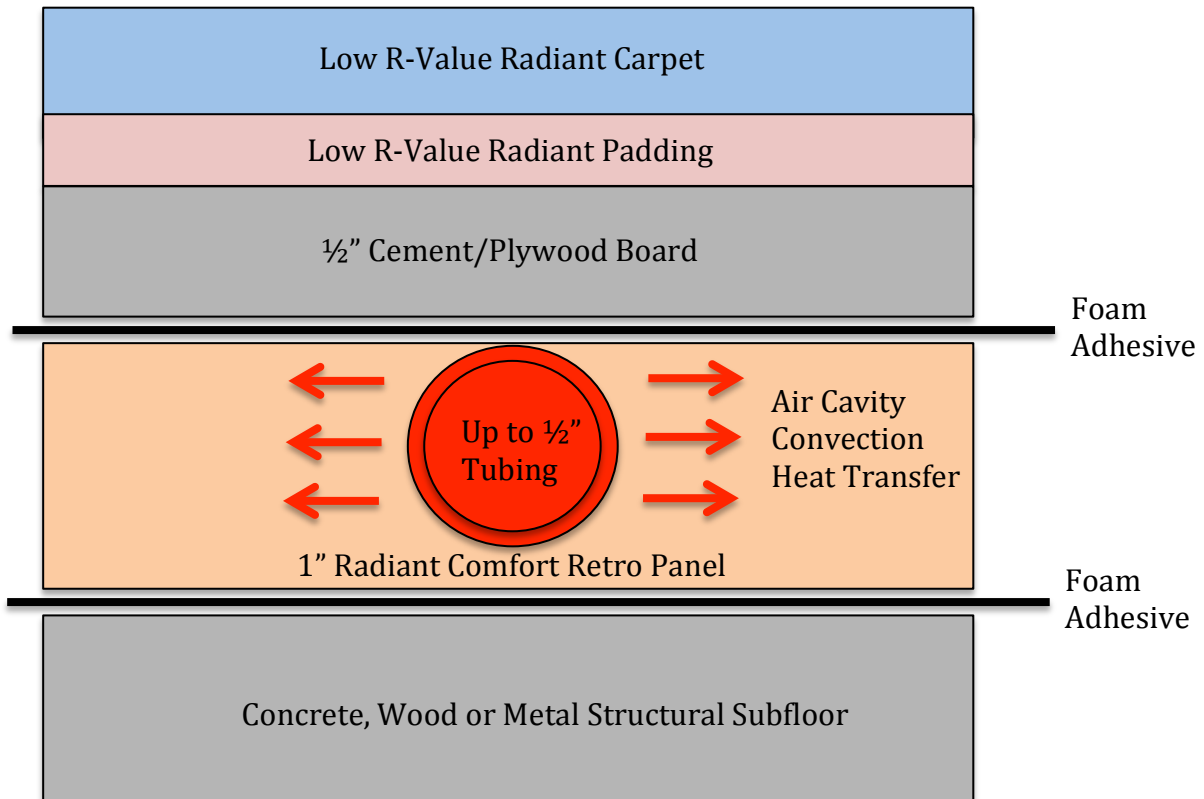

Required fasteners*: **Foam adhesive**

- 1) Use **foam adhesive** to fasten Radiant Comfort to the 3/4" minimum structural subfloor.
- 2) After 30 minutes, or when foam adhesive is set, walk the tubing into Radiant Comfort. Use a tubing de-coiler to unwind the tubing and prevent kinks.
- 3) Use **foam adhesive** to fasten the 1/2" cement/plywood board at the Radiant Comfort puck centers.
- 4) Lay 1/2" cement/plywood board over Radiant Comfort.
- 5) Lay a low r-value radiant padding over the 1/2" cement/plywood board.
- 6) Lay a low r-value radiant carpet over the low r-value radiant padding.

*Please refer to the Radiant Comfort installation instruction sheet prior to using this detail.