


RADIANT COMFORT™

Hydronic In-floor Insulation Panels Tile Flooring Installation Detail

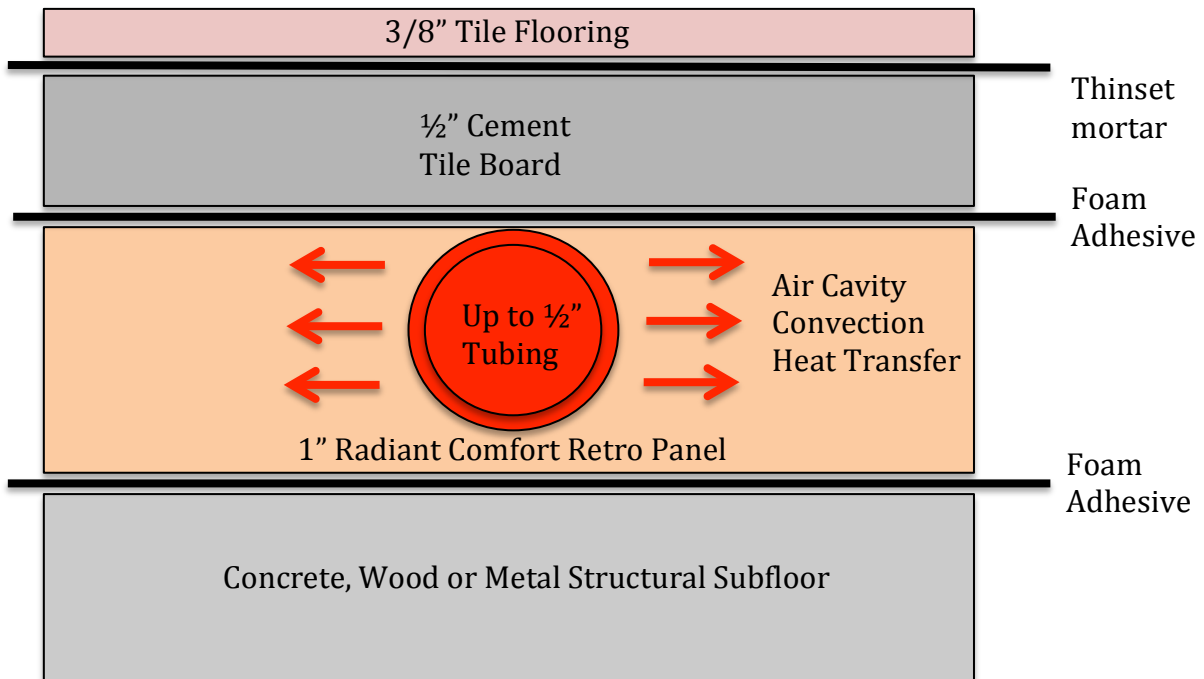

Required fasteners*: **Foam adhesive, thinset mortar**

- 1) Use **foam adhesive** to fasten Radiant Comfort to the structural subfloor.
- 2) After 30 minutes, or when foam adhesive is set, walk the tubing into Radiant Comfort. Use a tubing de-coiler to unwind the tubing and prevent kinks.
- 3) Use **foam adhesive** to fasten the 1/2" cement tile board at the Radiant Comfort puck centers.
- 4) Lay 1/2" cement tile board over Radiant Comfort.
- 5) Use **thinset mortar** to fasten tiles over 1/2" cement tile board.

*Please refer to the Radiant Comfort installation instruction sheet prior to using this detail.