


RADIANT COMFORT™

Hydronic In-floor Insulation Panels Tubing Installation Detail

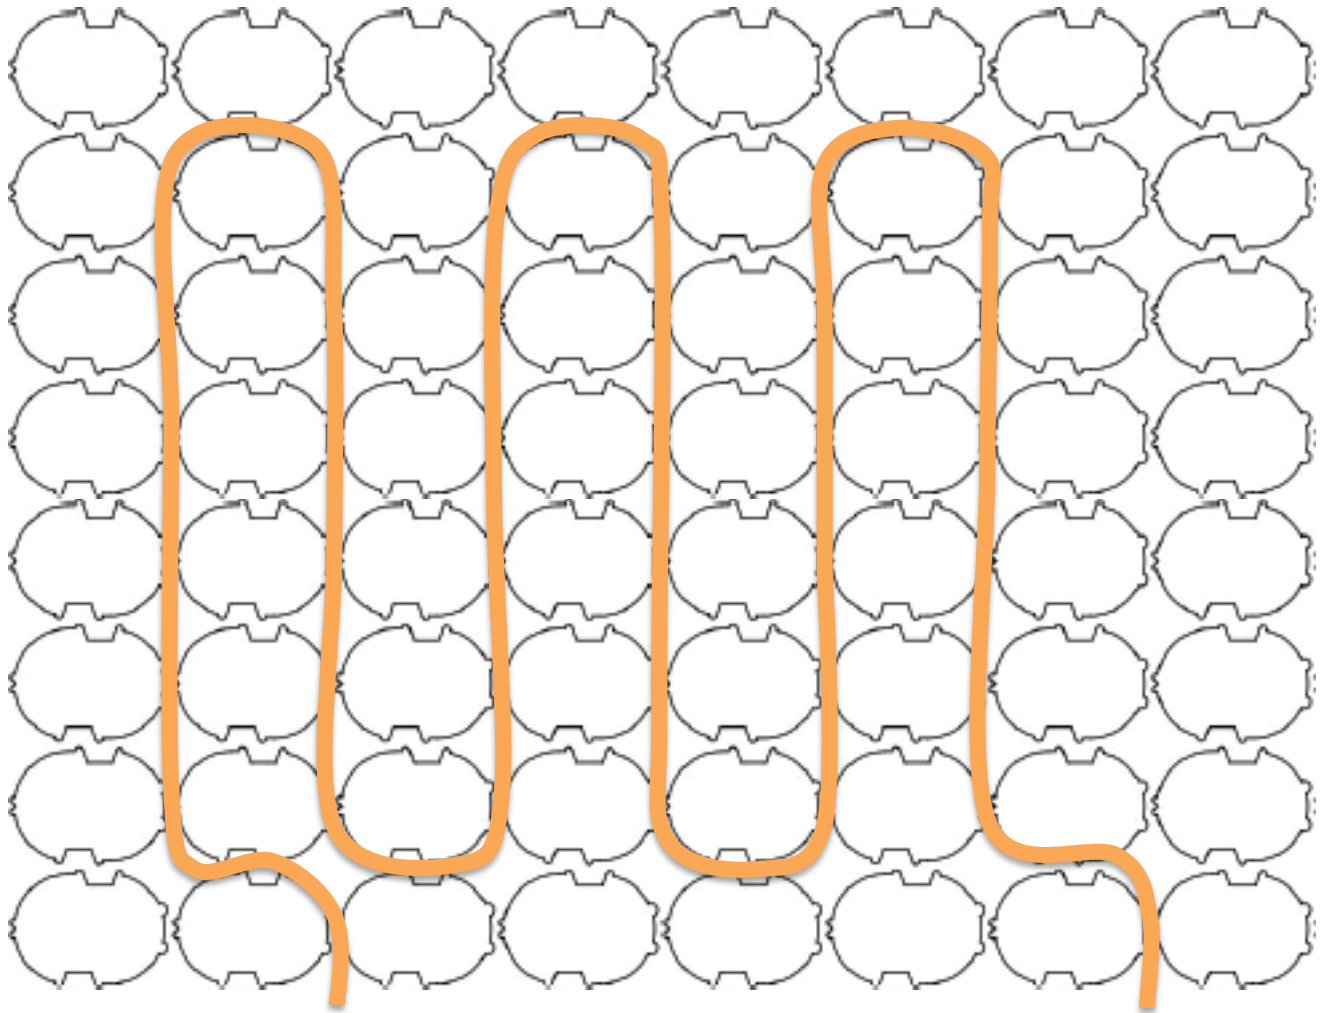

Required tubing*: **Up to 5/8" tubing in new construction panels and up to 1/2" tubing in retrofit panels**

- 1) Secure Radiant Comfort retrofit panels to the structural subfloor with adhesives.
- 2) Secure Radiant Comfort new construction panels by overlapping panel seams*.
- 3) Lay out the tubing as shown above to prevent tubing pop ups when starting and stopping a tubing loop. Wrapping the tubing around a puck in this fashion will secure the tubing in place and speed up the installation process.

*Please refer to the Radiant Comfort installation instruction sheet prior to using this detail.